

# Operation Manual



## **SAFETY INSTRUCTIONS**

- Read all instructions carefully before using your blender.
- Following these instructions will help prevent injuries and damage to the machine and will ensure that you have the best possible experience with your new blender.
- Keep the appliance and the plug away from water and other liquids. In the unlikely event that the appliance falls into water, immediately unplug it and have a specialized technician inspect the appliance. Failure to follow these instructions could result in life-threatening situations.

## **AVOID CONTACT WITH MOVING PARTS**

- Always keep fingers, hands, hair and clothing away from all moving parts.
- Always keep all utensils away from the drive socket and blender jar blades during operation as utensils may damage blades or the blender jar.
- Never put hands into the blade with your fingers whether it is on or off the motor base.
- Never place jar into drive socket if blender motor is operating.
- Do not rock or remove the blender jar during operation.
- These precautions will prevent personal injury and/or damage to the blender.

## **NEVER OPERATE THE BLENDER IF APPEARS DAMAGED**

- If the blender malfunctions, call your service agent first. If it is dropped or damaged in any way, return the blender to a service agent immediately for examination, repair, electrical or mechanical adjustment, or possible replacement.
- Never attempt to open the internal parts of the appliances by yourself.

## **NEVER PUT NON-FOOD ITEMS INTO JAR**

- Do not leave foreign objects, such as spoons, forks, knives, or the cap of the lid, in the container, as this will damage the blades and other components when the machine starts and can cause injuries.
- This equipment is only used for mixing food.

## **NEVER OPERATE THE BLENDER WITHOUT THE LID IN PLACE**

- The use of any unauthorized attachments may cause fire, electric shock, and/or injury and will void the warranty.

## **USE CAUTION WHEN BLENDING HOT LIQUIDS**

- Your commercial series blender may have a vented lid that acts a pressure relief to allow steam to escape. Be careful not to come in contact with any steam.

## **POWER CORD PRECAUTIONS**

- Never operate with a damaged cord or plug. If the supply cord is damaged it must be replaced by the manufacturer or authorized service agent avoid hazard.
- Do not permit the cord to hang over the edge of the work surface.
- Never use an extension cord with the unit.
- Unplug the blender motor when not in use, before changing blender locations, or when cleaning.
- Make sure the power cord does not come into contact with sharp or hot objects, and keep it away from open flames. To unplug the appliance, always pull on the plug and not the cable.

## **NEVER ATTEMPT TO REPAIR THE POWER UNIT**

## **TURN THE BLENDER OFF WHEN NOT IN USE**

- Always remove the plug from the power outlet when the appliance is not in use, and always before cleaning it.

## **SHAFT AFTER USE**

- The blender drive socket and jar shaft may become very hot after blend cycles.
- The moving parts will heat up with prolonged use. Never touch the moving parts during or after operation. There is a risk of injuries, such as burns!

## **SAFETY**

- It is not intended to be used by or near children or adult with reduced physical, sensory, or mental capabilities or lack of experience and knowledge. Close supervision is necessary when any appliance is used by children or near them, or by disabled adults.

## **NEVER OPERATE THE BLENDER WITH MORE THAN THE MARKED CAPACITY OF THE JAR**

## **PREPARATIONS BEFORE FIRST USE**

- Check that the appliance is sealed and unused. In case of any signs of use, contact your supplier immediately and DO NOT use the appliance.
- Remove all packaging material.
- Clean the appliance with warm water and a soft cloth.
- Place the appliance on a flat and stable surface.
- Position the appliance so that the plug is accessible at all times.

## CONTROL PANEL



## OPERATION

- Plug in the blender.
- Press the power icon to turn on the blender.
- The entire display will momentarily light up.
- The blender is ready to use when the Start/Stop button is flashing.
- Place the blender jar on the motor base, ensuring the jar is completely seated and the jar lid is secured.
- Open the soundproof cover and remove the jar. Fill the ingredients into the jar and securely close the lid. Then, place the jar back into the blender.
- Close the soundproof cover and press the flashing power on/off button.
- Choose the desired program button or set the time and speed followed by the power on/off button.
- For an instant blend at full speed, press the pulse button for the desired duration.

## PROGRAMS

- This blender is designed to memorize 5 programs for 5 different recipes.
- Each program consists of 6 stages, and each stage can be programmed for a certain time and speed.

## EXAMPLES AND PROGRAMMING RECOMMENDATIONS

Program	Time	Example of use
P1	10 Seconds	Low-speed blending
P2	15 Seconds	Medium-duration blending for juices, purees, smoothies, frappuccinos, etc.
P3	16 Seconds	
P4	28 Seconds	
P5	33 Seconds	Sauces and other beverages

### PROGRAM SETTING

1. Press and hold the desired button (P1-P5) to adjust, after which the programmable mode becomes active with a beep sound and Stage S1 is displayed.
2. Set the desired speed (1-9) and time (1-90 seconds).
3. Tap the program button to display Stage S2.
4. Adjust the desired speed and time for Stage S2. Repeat for Stages 3-6.
5. Press the program button to save the settings, and you will hear a beep.

### DEFAULT PROGRAM MODE

The programs on your blender can be restored to the factory default settings.

1. Long-press P1 and P2.
2. The factory settings will be restored with a confirmed beep sound.

### CLEANING & SANITIZING

1. Make sure to pull the power plug when cleaning up products.
2. Wash the products and other components immediately after use.
3. The exterior of the host machine can be cleaned by wet cloth.
4. Please wash the conditioning cup after each use or if it is idle for over 10 minutes.

5. The rubber lid shall be taken down for cleaning after each use. Please do not brush it with a sharp instrument in order to avoid the scrape of the rubber lid.
6. Sediment will adhere to knife tackle. It is recommended that user shall take down and clean up the knife tackle thoroughly every two weeks.
7. Make sure the product is clean and dry before it is stored.
8. Please pull the power plug from the socket if the product is not used for a long time and pay attention to the prevention of the machine body from dust and insects.

## **DISINFECTION GUIDELINES**

1. Follow the above standard cleaning instructions.
2. Fill the container halfway with water and 1.5 teaspoons of liquid bleach.
3. Attach or push the complete 2-part lid into the locked position.
4. Select low speed. Then, press the power on/off button and slowly increase the speed to medium, followed by high.
5. Run the machine at high speed for 30 to 60 seconds.
6. Turn off the machine and let the bleach mixture sit in the container for an additional 90 seconds.
7. Pour out the bleach mixture. Allow the container to air dry.
8. Do not rinse after disinfection.

## **ACCESSORY CLEANING**

Separate the lid and lid plug. Wash the parts in warm soapy water. Rinse and dry. Reassemble before use.

**Important: To ensure continuous and effective performance, do not put the container lid, lid plug in the dishwasher.**

## **CLEANING THE MOTOR BASE**

1. Disconnect the power cord.
2. Wipe the outer surface with a damp cloth or sponge that has been rinsed in a mild solution of liquid detergent and warm water. Do not put the motor base in water.
3. The rubber center piece can be removed for more thorough cleaning.
4. Use a damp cloth or sponge to clean the digital control panel, as it may become sticky from use.
5. Polish with a dry, soft cloth.

## **WARRANTY**

1. Customers shall fill out the product and user information carefully in accordance with the contents when purchasing the machine and make sure to ask for the proof of purchase.
2. Customers shall send the product to the place of purchase or the company offices or headquarters if the product requires maintenance.
3. Both the proof of purchase and the product warranty card shall be presented when maintenance is required.
4. The proof of purchase provides one year warranty from the purchase date (business site provide six months warranty, while cooking and soybean milk chain store provides three months warranty). Free maintenance is provided if a fault occurs to the product under normal use, but the expandable parts (various rubber products, bearings, tools, etc.) are excluded from the free maintenance.
5. There is no maintenance for the quality faults of the imitation products or the imitation product parts.
6. Free maintenance is not provided for the cases as follows although the product is within the warranty period:
  - (1) Fail to show the proof of purchase and the product warranty card, or the presented information is inconsistent with the actual condition or is altered;
  - (2) Improper use in accordance with the manual provided causes fault or damage;
  - (3) Unauthorized demolition or renovation causes fault damage;

- (4) Damage is caused due to force majeure such as natural disaster, earthquake, etc.;
7. The basic inspection fee of RMB 100 shall be considered and charged no matter the product will be repaired or not after the product is sent to the maintenance station for repair if the warranty period is exceeded.
  8. When the product used for more than three years is repaired, the replacement parts are used for repair if there is a lack of parts and the repair will not be provided if there are no replacement parts. Please understand it.
  9. During the repairing period of the product, the company will repair the product as soon as possible, and try to return it to customers at first time, but in the meantime, the company will not be responsible for any liability for compensation for the damaged interests of customers and the damage conditions that may occur.
  10. The warranty card will not be supplemented if lost. Please keep it safe.

Customer Name: \_\_\_\_\_

Model: \_\_\_\_\_

Date: \_\_\_\_\_

Remark:

1. One year warranty from date of production.
2. Warranty covers any manufacturing technical defect excluding breakage.
3. Warranty is void if repairing without our consent or warranty seal is broken.
4. The warranty does not cover faults resulting from artificial destruction or not following instructions.